
# CONCEALABLE BODY ARMOR STRAP KIT

**INCLUDES (6) SIX STRAPS** 

**MALE** 

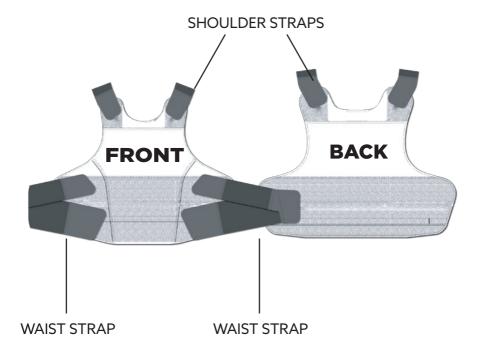

## **VEST ASSEMBLY**

- 1. Attach shoulder straps to the front of the carrier. See illustration above.
- 2. Attach waist straps to the back of the carrier. See illustration above.
- 3. Don the vest. With vest on, adjust shoulder straps as necessary. After adjusting the shoulder straps, adjust the waist straps accordingly.

Note: The waist should have the appropriate overlap that is equal on both sides of the carrier. The front panel should overlap the rear panel. See the Body Armor Fit Guide for more information.

### **USE & CARE GUIDELINES**

- 1. Remove the straps from the carrier.
- 2. To launder the straps, hand wash with mild soap and cool water.
- 3. Wipe off excess soap with clean water and a damp sponge.
- 4. Lay straps flat to dry and wipe surface with a cloth. DO NOT HANG OR LINE DRY. DO NOT PLACE IN THE SUN.
- 5. Ensure the straps are completely dry before reattaching them to carrier.






# CONCEALABLE BODY ARMOR STRAP KIT

**INCLUDES (6) SIX STRAPS** 

**MALE** 

# RIGHT STRAP LEFT STRAP

# **SHOULDER STRAPS**

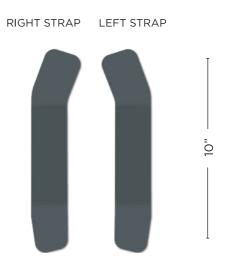

# **WAIST STRAPS**

